

MACHINE AND EQUIPMENT STORAGE

If the machine is not installed as soon as it is received, it must be stored in a clean, dry, covered place, avoiding damp and/or salty places. Keep it protected from atmospheric agents and dusty areas which can cause damage to the entire structure, especially the drive unit. If the machine is kept in the open for long periods for various reasons, protect it with wraps. During such long shutdowns, keep the machine on a wooden pallet, never place it directly on the ground.

Do not rest the machine on its side, place it on a suitable surface, without humps and unevenness, the level surface must be free of oil stains.

Drain out the oil from the reduction gears and clean thoroughly to prevent residue which can form lumps over time.

Do not remove the parts from their packing. During installation, before start up, carry out certain routine checks:

- Check the electrical systems to ensure they are intact;
- Check all the item installed on the unit components to make sure they are intact;
- Check and in case refill the the gearbox with oil (with the type of oil indicated by the part manufacturer) to the maximum permitted level;
- Clean the loading and unloading points;

PREVENTION AND PROTECTION

The machine is provided with guards and systems to guarantee correct use in complete safety. However, remember that unsafe situations can be avoided if the entire manual is read and the machine is operated by qualified personnel