



Internal part of the blade

To replace the springs under the discharging ramp follow the hereunder instructions:

1. Take off the old springs. To take the correct length for the new one, put the discharging ramp in the position that allow the blade to be in contact with the drum (no space between). Measure the distance between the 2 end point of the spring (Length A).
2. The length of the springs has to be equal to Length A + 3 cm. Measure the length of the springs and adjust the dimension according to this value (length A +3).
3. Install the new springs.
4. To check if the pressure made by the springs on the ramp is correct, push the ramp against the springs checking that the movement is not too hard to make. If it's impossible it means that the springs are too long and need to be shorten. Do again the procedure.
5. Check that the internal side of the blade doesn't touch the drum