



Before disassembling the washes, make sure that the machine is safe and not powered.


Disconnect all the pipes that feed the 3 washes.

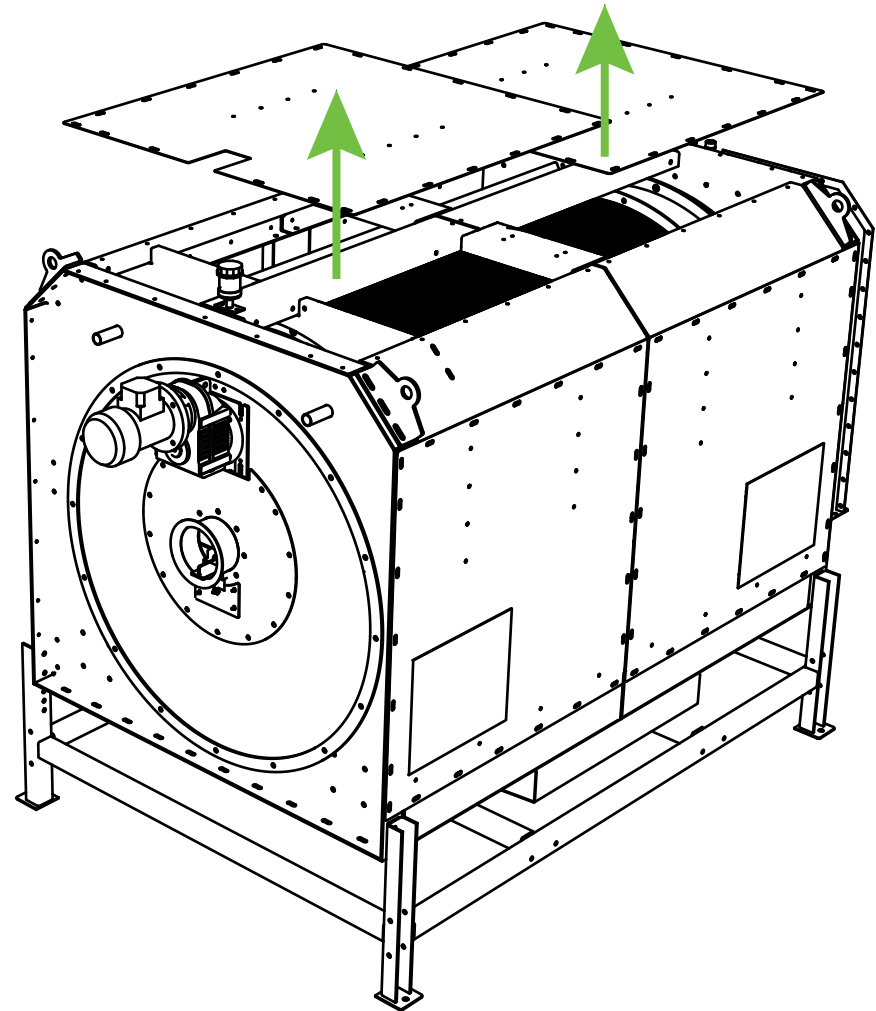



To remove the external washes remove the top covers

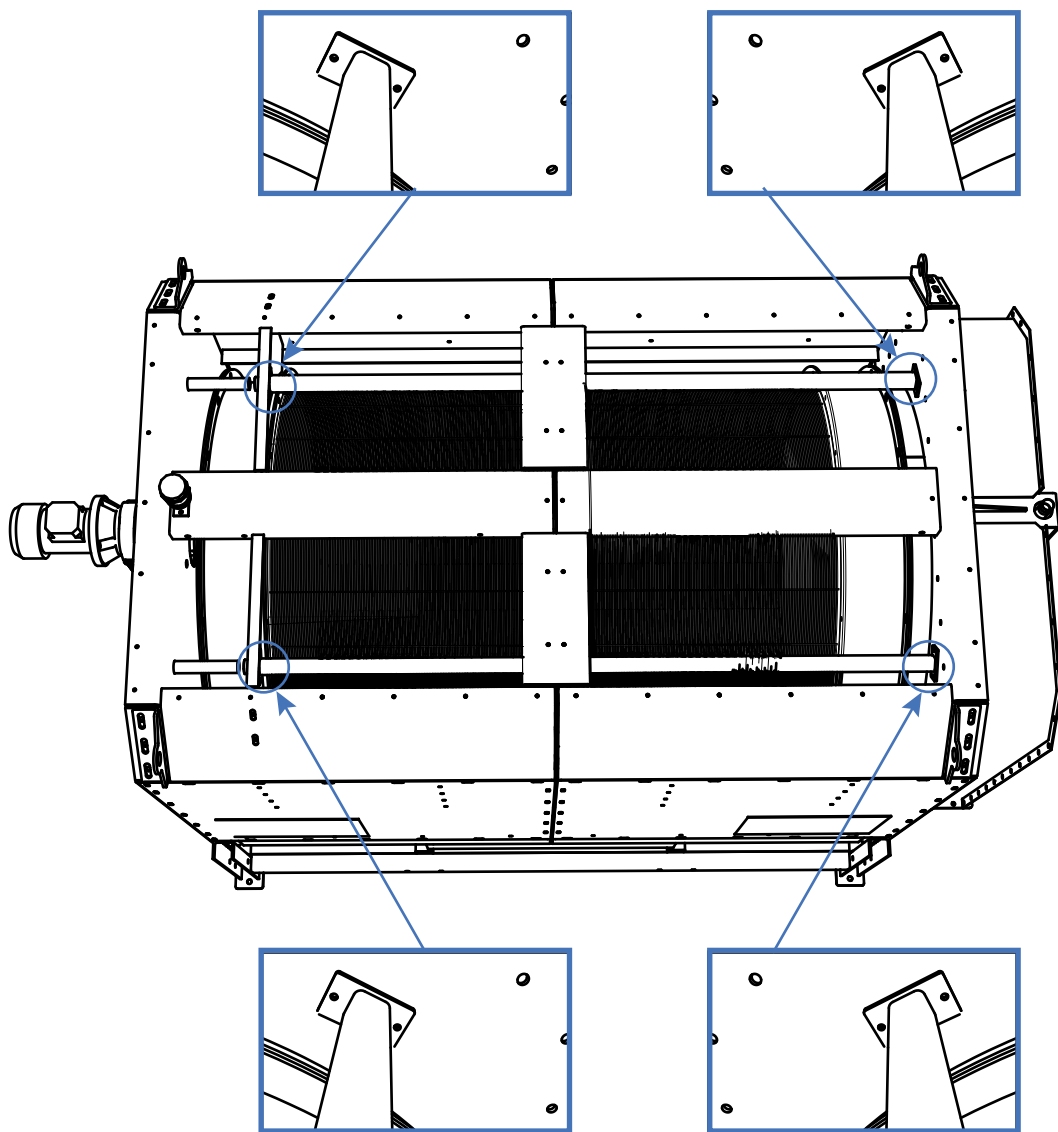


Remove the bolts that secure the washes to the machine body

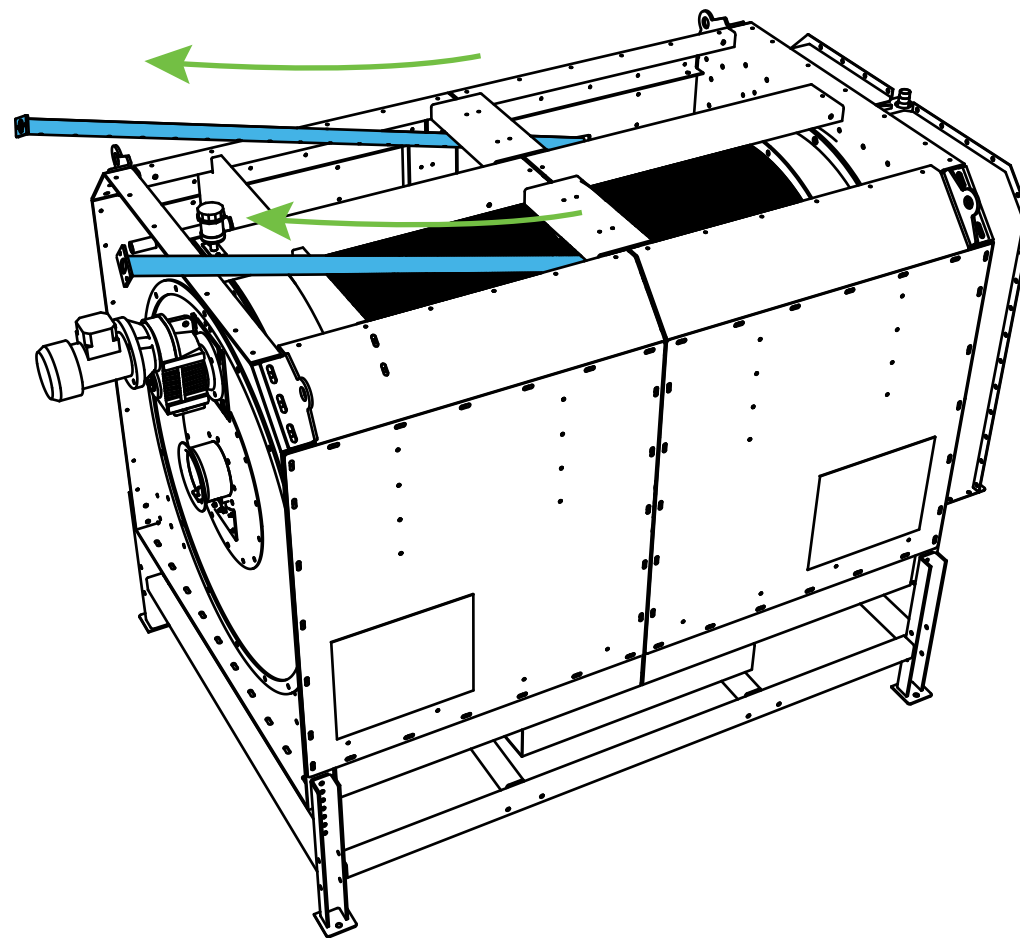


Remove external washes from the unit

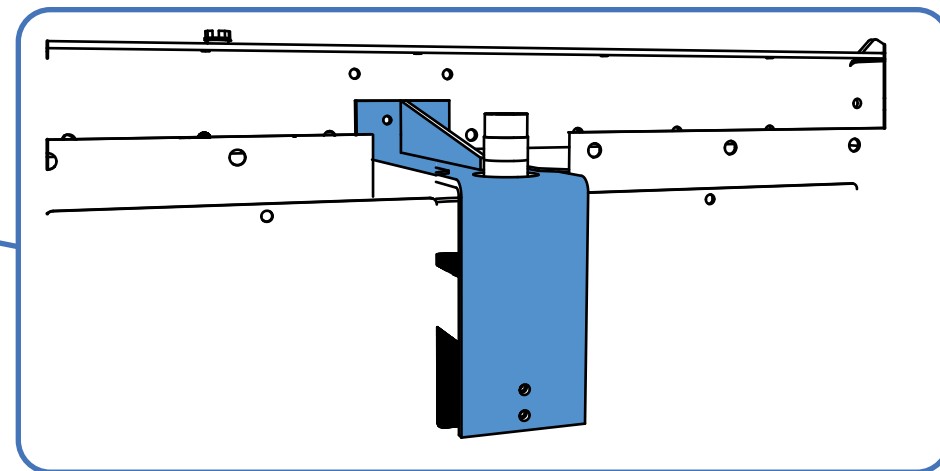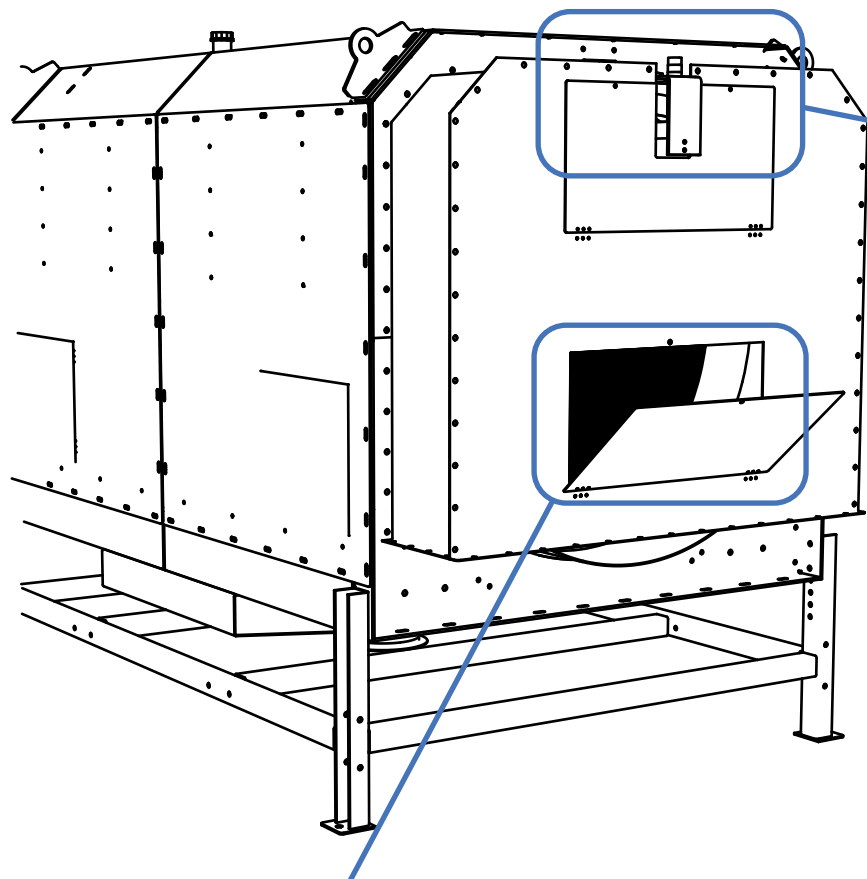


Unscrew the bracket to release the wash in the front side

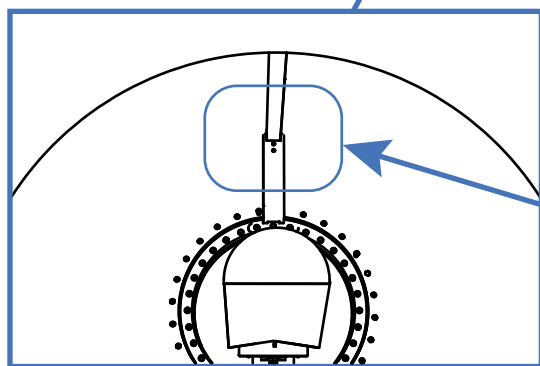

*View from the inspection window*

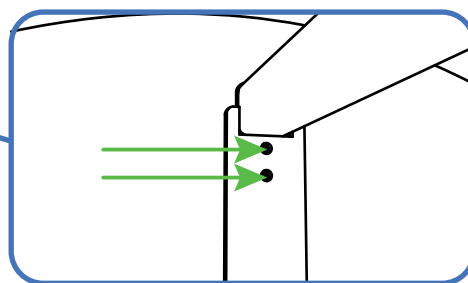

Unscrew the bracket to release the wash inside the drum

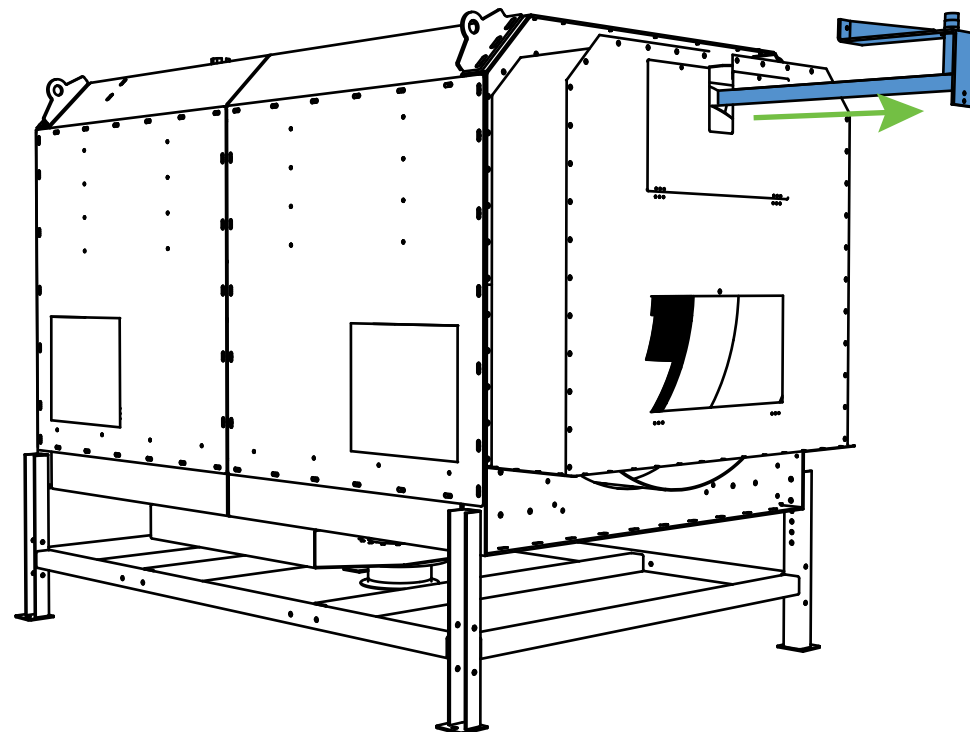

Finally remove the internal wash by sliding it off the unit